

AQUAPHON®

A 200 receiver



AQUAPHON®

A 200 receiver



A 200 receiver

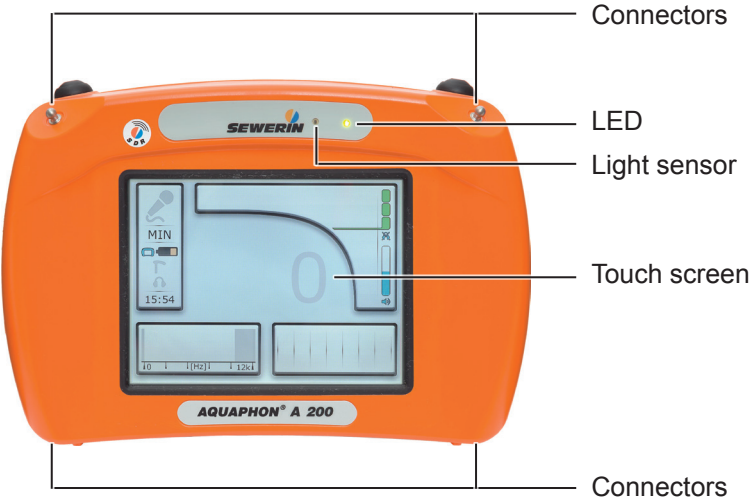


Fig. 1: Front

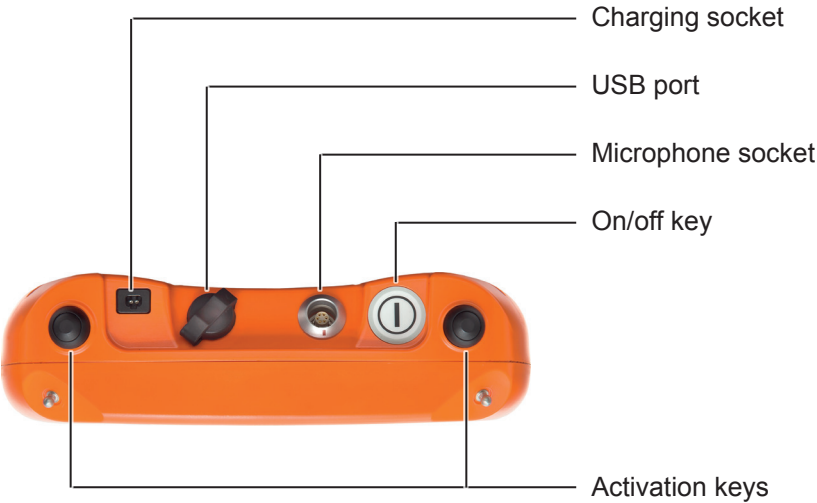


Fig. 2: View from above

TS 200 carrying rod

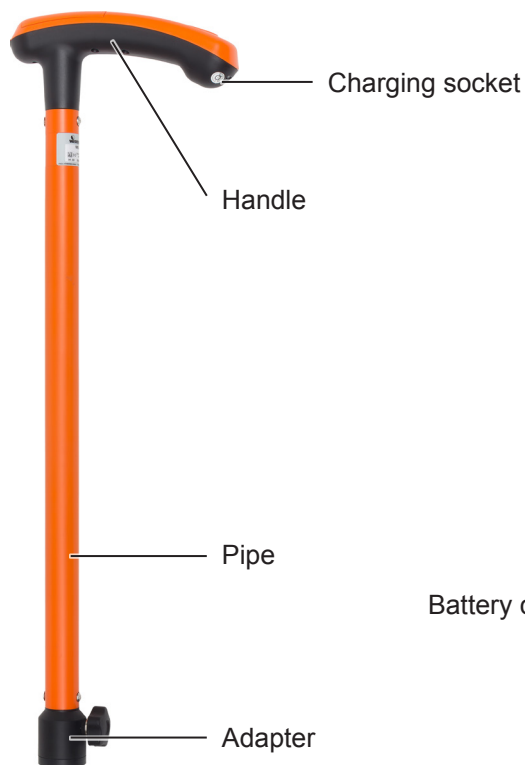


Fig. 3: Full view

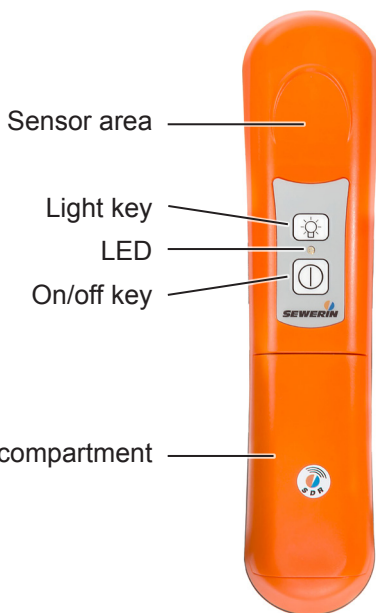


Fig. 4: Handle (view from above)



Fig. 5: Adapter
Left image: Fastening screw with seal
Right image: Star knob in fastening screw

Information about this document

The warnings and notes in the document mean the following:



WARNING!

Risk of personal injury. Can result in serious injury or death.



CAUTION!

Risk of personal injury. Can result in injury or a risk to health.

IMPORTANT!

Risk of damage to property.

Note:

Tips and important information.

Enumerated lists (numbers, letters) are used for:

- Instructions that must be followed in a specific sequence

Bullet lists (bullet points, dashes) are used for:

- Lists
- Instructions comprising only one action

1	Introduction	1
1.1	Warranty	1
1.2	Purpose	2
1.3	Intended use	2
1.4	General safety information	3
2	AQUAPHON system	4
2.1	General information about the system	4
2.1.1	Communication	4
2.1.2	Hearing protection	4
2.1.3	Operating concept	4
2.1.3.1	Switch-on mode	5
2.1.3.2	Applications	6
2.1.3.3	Contact points	6
2.2	System components	7
2.2.1	Overview	7
2.2.2	A 200 receiver	8
2.2.2.1	Setup	8
2.2.2.2	Carrying the system	10
2.2.2.3	Playing back noises	10
2.2.2.4	Displaying the measurement values	10
2.2.2.5	Automatic power off	11
2.2.2.6	Main view	11
2.2.3	TS 200 carrying rod	15
2.2.4	Microphones	16
2.3	Switching on and off	19
2.3.1	Components	19
2.3.2	System	19
2.4	Power supply to the components	20
3	System in use	21
3.1	Attaching the microphone to the carrying rod	21
3.2	Switching on the system	21
3.2.1	Startup with user guide	22
3.2.2	Direct startup	24
3.3	Naming measurements	25
3.4	Starting and ending a measurement	25
3.5	Adjusting the hearing protection threshold and volume	26
3.6	Adjusting the filter settings	28
3.6.1	Notes on the filter settings	28

Contents	Page
3.6.1.1	Filter limits and stopband28
3.6.1.2	Default settings for every application29
3.6.1.3	Purpose of adjustment29
3.6.1.4	Adjustment options.....29
3.6.1.5	Display of adjusted filter settings in the main view30
3.6.2	Opening the Filter menu.....30
3.6.3	Scanning31
3.6.4	Moving filter limits.....32
3.6.5	Scaling the display33
3.6.6	Resetting filter settings.....34
3.7	Playing back noise repeatedly34
3.7.1	Opening the Audio Player menu35
3.7.2	Playing back noise36
3.7.2.1	Playing back noise with recorded filter limits.....37
3.7.2.2	Playing back noise with current filter limits.....37
3.7.2.3	Playing back noise faster38
3.8	Saving recorded measurements38
3.9	Deleting the recorded measurement.....40
3.10	Loading saved measurements40
3.11	Deleting saved measurements.....43
3.12	Displaying information about a measurement.....44
3.13	Calibrating the touch screen45
4	Settings47
4.1	Overview47
4.2	Setting actions.....47
4.2.1	Selecting48
4.2.2	Enabling/disabling48
4.2.3	Setting a value49
4.3	Settings in the Measurement menu50
4.3.1	Method51
4.3.2	Type51
4.3.3	Hearing protection.....52
4.3.4	Activation keys52
4.3.5	Timer53
4.3.6	Duration.....54
4.4	Setting the application.....54
4.5	Settings in the Device menu55
4.5.1	Switching off the device56
4.5.2	Switching off the backlight.....56
4.5.3	Detecting the position.....57

4.5.4	Automatic brightness.....	57
4.5.5	Brightness.....	57
4.5.6	Time.....	58
4.5.7	Date.....	58
4.5.8	Date format.....	58
4.5.9	Time format.....	59
4.5.10	Language.....	59
4.5.11	Information.....	59
4.5.12	Calibration.....	59
5	Maintenance.....	60
5.1	Charging the batteries.....	60
5.1.1	Charging the batteries in the case.....	60
5.1.2	Charging batteries using the AC/DC adapter or vehicle cable.....	61
5.2	Handling faulty lithium-ion rechargeable batteries.....	62
5.2.1	Identifying faulty batteries.....	62
5.2.2	Removing the batteries from the A 200 receiver.....	63
5.2.3	Removing the battery from the TS 200 carrying rod.....	64
5.3	Care.....	66
5.4	Maintenance.....	66
6	Appendix.....	67
6.1	Technical data.....	67
6.1.1	Receiver A 200.....	67
6.1.2	Carrying rod TS 200.....	68
6.1.3	Ground microphone BM 200 and BM 230.....	69
6.1.4	Touch microphone TM 200.....	70
6.1.5	Universal microphone UM 200.....	70
6.2	Symbols on the touch screen of the A 200 receiver.....	71
6.3	Significance of LED signals.....	73
6.3.1	A 200 receiver.....	73
6.3.2	TS 200 carrying rod.....	74
6.4	Suitability of the microphones for the applications.....	75
6.5	Operating the system by activation key or sensor area.....	76
6.6	Accessories.....	77
6.7	EC Declaration of Conformity.....	77
6.8	Note about the firmware (open source software).....	78
6.9	Advice on disposal.....	78
7	Index.....	79

1 Introduction

1.1 Warranty

The following instructions must be complied with in order for any warranty to be applicable regarding functionality and safe operation of this equipment.

- Read these operating instructions prior to operating the product.
- Use the product only as intended.
- Repairs and maintenance must only be carried out by specialist technicians or other suitably trained personnel. Only spare parts approved by Hermann Sewerin GmbH may be used when performing repairs.
- Changes or modifications to this product may only be carried out with the approval of Hermann Sewerin GmbH.
- Use only Hermann Sewerin GmbH accessories for the product.

Hermann Sewerin GmbH shall not be liable for damages resulting from the non-observance of this information. The warranty conditions of the General Terms and Conditions (AGB) of Hermann Sewerin GmbH are not broadened by this information.

In addition to the warnings and other information in these Operating Instructions, always observe the generally applicable safety and accident prevention regulations.

The manufacturer reserves the right to make technical changes.

1.2 Purpose

AQUAPHON is a system for the acoustic location of water leaks and water pipes.

The **AQUAPHON** system can be used for:

- Leak detection
- Pipeline location

Note:

All descriptions in these operating instructions refer to the system as delivered (factory settings). The manufacturer reserves the right to make changes.

1.3 Intended use

The **AQUAPHON** system is designed for professional industrial and commercial use. The appropriate specialist knowledge is required to operate the system.

Note:

If necessary, learn more about the theory before commencing practical work with the system.

The system must only be used for the applications specified in section 1.2.

1.4 General safety information

This product was manufactured in keeping with all binding legal and safety regulations. It corresponds to the state-of-the-art and conforms to EC requirements. The product is safe to operate when used in accordance with the instructions provided.

However, if you handle the product improperly or not as intended, the product may present a risk to persons and property. For this reason, always observe the following safety information.

Risk of personal injury (health risk)

- Handle the components carefully and safely both during transport and when working.
- Proceed with extreme caution in the vicinity of electrical lines.

Hazards for the product and other property

- Always handle the components with care.
- Do not drop the components.
- Never set the components in places where they are at risk of falling.
- Before starting work, check that the components are in good working order. Never use damaged or faulty components.
- Ensure that no dirt or moisture can get into the ports on the components.
- Always observe the permitted operating and storage temperatures.

2 AQUAPHON system

2.1 General information about the system

2.1.1 Communication

The components of the **AQUAPHON** system communicate by bidirectional SDR (SDR: Sewerin Digital Radio). Wireless communication allows the user considerable freedom of movement. The sound quality of the acoustic playback is not affected by swinging cables.

2.1.2 Hearing protection

The **AQUAPHON** system protects the user's hearing against sudden, loud interference noise. This type of interference noise can occur, for example, when vehicles drive by or when the user with a touch microphone slips off the contact point.

The hearing protection function activates when the individual hearing protection threshold setting is exceeded. Once the source of interference goes quiet, the hearing protection automatically switches back off again.

The way the hearing protection works depends on the settings (**Measurement** menu > **Hearing protection**).

Note:

Another way of protecting your hearing against loud noises is to only set the volume as high as is absolutely necessary.

2.1.3 Operating concept

Working with the **AQUAPHON** system requires specialist knowledge of leak and pipeline location. You do not, however, require any special skills to use the system itself, as it can guide you through the process.

To ensure successful location with the **AQUAPHON** system, all users must know:

- What is to be located?

The purpose determines the choice of **application**.

- Where is it to be located?

Conditions on the ground determine the choice of **contact point**.

2.1.3.1 Switch-on mode

The receiver always automatically determines the switch-on mode. There are two options:

- **Startup with user guide**

- **Direct startup**

The situation when the receiver is switched on determines which switch-on mode is used. The receiver checks whether or not certain steps have already been performed. These steps include:

- System components have been connected (e.g. carrying rod and a ground microphone).
- System components have already been switched on before the receiver.

For more detailed information about switching on dependent on switch-on mode, please refer to section 3.2 on page 21.

Startup with user guide

Target group:	Users with little experience of using the system. <ul style="list-style-type: none">– The user is unsure of which system components to select for a certain application and the corresponding contact point.
---------------	--

The user first switches on the receiver. Once an application and the contact point have been selected, the receiver provides detailed instructions about which components are to be connected and switched on in what order.

Direct startup

Target group: Experienced users.
– The user knows which components of the system to select for a certain application and the corresponding contact point.

The user starts by selecting the suitable components himself. He connects any components that need to be connected mechanically. He then switches on the components before switching on the receiver last. The receiver automatically recognises the components as it is switched on.

With Direct startup, the system is ready to use as soon as the receiver is switched on.

2.1.3.2 Applications

The names of the applications correspond to their possible uses. The system can be used for:

- **Leak detection**
- **Pipeline location**

2.1.3.3 Contact points

Each application allows the system to be used on certain contact points. The contact point is the area on which a microphone is placed.

The following contact points can be selected:

- **Paved**

The contact point has a smooth, firm surface (e.g. asphalt, concrete, plaster).

- **Unpaved**

The contact point has an uneven surface, which may sometimes give way (e.g. gravel, Macadam, grass).

- **Fitting** (only for leak detection)

The contact point is, for example, a hydrant or slide gate.

- **Universal** (only for leak detection)

The contact point is located inside a building.

This option is intended for locating leaks and pipes with the **UM 200** universal microphone.

2.2 System components

2.2.1 Overview

The **AQUAPHON** is a modular system. The main components of the systems are:

- **A 200** receiver
- **F6** wireless headphones
- **TS 200** carrying rod

The carrying rod is required when using the following microphones:

- **BM 200** ground microphone
- **BM 230** ground microphone (with tripod)
- **TM 200** touch microphone

A probe tip and possibly an extension are required for the touch microphone.

- **UM 200** universal microphone
- **AQUAPHON A 200** case

The system can be transported and stored in the case. The batteries for the components **A 200**, **TS 200** and **F6** can be simultaneously charged in the case using AC/DC adapter **L**.

Accessories can be added to the system at any time.

Note:

Information about F6 wireless headphones can be found in the relevant operating instructions.

2.2.2 A 200 receiver

2.2.2.1 Setup

Overviews with the names of all the parts of the receiver can be found inside the front cover (Fig. 1 and Fig. 2).

Its symmetrical housing means that it can be operated by both right-handed and left-handed users with ease.

Touch screen

The receiver features a touch screen. Certain areas of the touch screen are touch-sensitive. Actions are performed by touching these areas (buttons).

All of the buttons have a thick, dark grey outline.

Only your finger or a touch pen should be used to operate the touch screen.

- Always touch the buttons briefly without exerting too much pressure.

WARNING! Risk of damage

The surface of the touch screen is sensitive.

- Do not use any hard or sharp objects (e.g. pens) to operate the screen.
 - Protect the touch screen against aggressive substances (e.g. acidic or abrasive detergents).
-

Overviews with the symbols that might appear on the touch screen can be found in section 6.2.

Light sensor

The light sensor analyses the ambient lighting conditions.

If the automatic brightness setting is enabled, the light sensor always adjusts the brightness of the touch screen to the ambient lighting conditions.

Information about the automatic brightness setting can be found in section 4.5.5 on page 57.

On/off key

The on/off key is used to switch the receiver on and off.

Information on switching on and off can be found in section 2.3 on page 19.

Activation keys

The receiver has two activation keys. Only one of the two keys needs to be pressed to measure.

LED

The LED indicates the operating status.

Information about what the LED signals mean can be found in section 6.3.1 on page 73.

Ports

The receiver features the following ports:

- Charging socket
For recharging the battery.
- Microphone socket
For connecting the **UM 200** universal microphone.
- USB port
The USB port is only used by SEWERIN Service staff for maintenance work.

Connectors

Carrying systems (Vario, lap belt, hand loop) can be attached to the connectors.

The connectors are parts of TENAX quick-release fasteners.

2.2.2.2 Carrying the system

The receiver is usually carried in front of the body so that the user looks diagonally down at the touch screen.

SEWERIN recommends: Use a carrying system for locating operations. The carrying system prevents you from tiring during work. It also reduces the possibility of radio interference. Radio interference can occur if the user accidentally covers certain components in the receiver.

2.2.2.3 Playing back noises

The connected microphone records noises. When a measurement is ongoing, the noises are played back through the headphones. You can set the volume of the playback.

The noises are also recorded. Recorded noises can be saved. Both recorded and saved noises can be played back.

2.2.2.4 Displaying the measurement values

Various measurement values are calculated from the recorded noises (e.g. current noise level, extreme value of the measurement).

The measurement values can be displayed in two ways:

- Visually
- Numerically

Visual representation

The measurement values are displayed visually on the touch screen in the main view (volume button).

- Current noise level (level display)
- Extreme value (black line)

Numerical representation

The measurement value for the noise level is displayed as a numeric value in the centre of the main view on the touch screen.

This measurement value is an extreme value. Whether the extreme value is a minimum or maximum depends on the settings (**Measurement** menu > **Type**).

2.2.2.5 Automatic power off

The power supply to the receiver is designed in such a way that a fully charged battery will allow one full day's work without interruption. However, it is still recommended to conserve energy whilst working.

The receiver therefore offers the following automatic power-off options:

- **Switch off device**

The receiver switches off if it is not operated for a specified period of time. It must be switched back on again when you want to continue work.

- **Switch off backlight**

The receiver backlight switches off if it is not operated for a specified period of time. The receiver remains switched on.

If and when the automatic power off is activated depends on the settings (**Device** menu > **General** > **Switch off device** or **Switch off backlight**).

2.2.2.6 Main view

The touch screen of the receiver displays the main view when the system is ready for use.

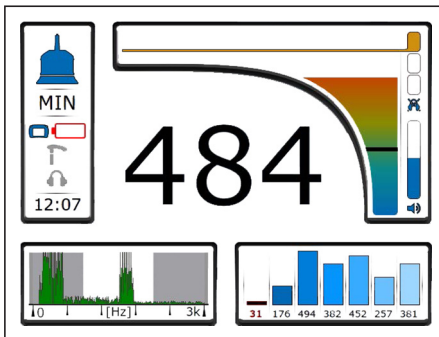


Fig. 6: Main view

The measurement value for the noise level is displayed in the centre of the main view. The main view also contains the following buttons:

- **Volume**
- **Audio player**
- **Filter**
- **Settings**

These buttons can be used to open submenus. The buttons also display information. The information displayed depends on the situation.

Volume

The **Volume** button displays the following information:

- Current noise level
- Extreme value
- Hearing protection threshold setting
- Volume setting

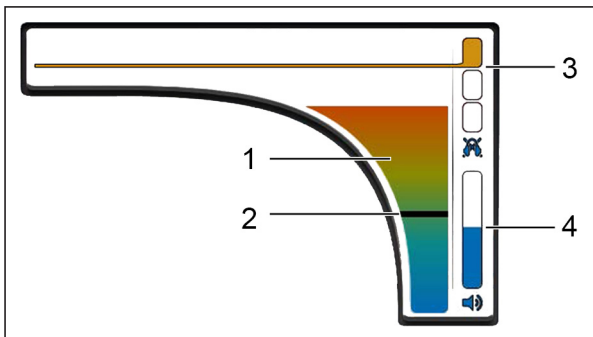


Fig. 7: **Volume** button
1 Current noise level, 2 Extreme value,
3 Hearing protection threshold, 4 Volume

The **Volume** menu is opened using the **Volume** button. The following settings can be made in this menu:

- Hearing protection threshold
- Volume

Audio player

The **Audio player** button displays the following information for the most recent measurements:

- Measurement value

The measurement value is displayed as a numeric value and a bar.

Up to seven measurements are shown. The current measurement appears on the left and the oldest measurement on the far right.

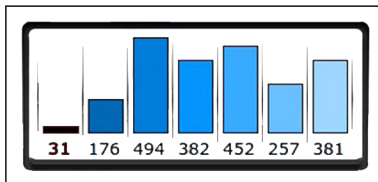


Fig. 8: **Audio player** button

The **Audio player** menu is opened using the **Audio player** button. The following actions can be performed in this menu:

- Play back, delete, save noise
- Load and play back noise from the memory
- Display information about a measurement

Filter

The Filter button displays the following information:

- Frequency analysis of the current noise
 - When there is no measurement ongoing:

All frequencies are displayed. The frequency analysis appears in light blue.
 - During a measurement:

Only the frequency components constantly available are displayed.

The frequency analysis appears in green.
- Frequency range
- Passband and stopbands (current filter limits)

The **Filter** menu is opened using the **Filter** button. The following settings can be made in this menu:

- Filter limits (limit frequencies of the bandpass)
- Scale for the frequency axis

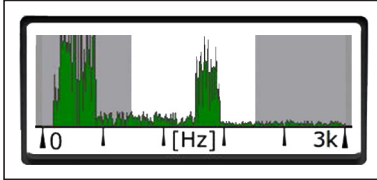


Fig. 9: **Filter** button during a measurement (frequency analysis appears in green)

Settings

The **Settings** button displays the following information:

- Application or connected microphone
- Set type of extreme value
- Connected components and information about the charge of the relevant batteries
- Time

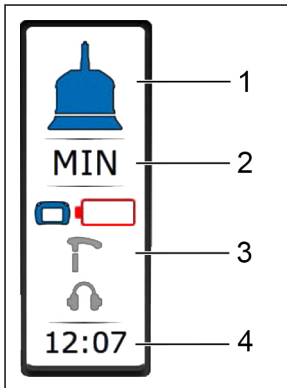


Fig. 10: **Settings** button
1 Application or microphone, 2 Type, 3 Components and charge of relevant batteries, 4 Time

The **Settings** menu is opened using the **Settings** button. The following settings can be made in this menu:

- Measurement
- Application
- Device

For more detailed information on the **Settings** menu, please refer to section 4 on page 47.

2.2.3 TS 200 carrying rod

The **TS 200** carrying rod is for use with microphones **BM 200**, **BM 230** and **TM 200**. The selected microphone must be attached to the carrying rod.

Overviews with the names of all the parts of the carrying rod can be found inside the front cover (Fig. 3 to Fig. 5).

For more detailed information about the microphones, please refer to section 2.2.4 on page 16.

Safety information for using the TS 200

- Handle the carrying rod carefully and safely both during transport and when working.
Be particularly careful when the touch microphone and probe tip are screwed onto the carrying rod.
- Do not lean on the carrying rod.

Star knob and fastening screw on the adapter

There is a star knob on the adapter. The star knob is fixed in a fastening screw.

The microphone is screwed onto to the carrying rod with the star knob. The star knob can be removed from the adapter if necessary.

Information on attaching microphones to the carrying rod can be found in section 3.1 on page 21. Please note in particular the warning.

Sensor area

A measurement can be started by touching the sensor area. The sensor area can be operated in two different modes. Information about the modes can be found in section 4.3.4 on page 52.

Note:

Instead of using the sensor area on the carrying rod to start a measurement, you can also press an activation key on the receiver. For more detailed advice on selecting a control, please refer to section 6.5 on page 76.

Do not touch the sensor area while switching on the carrying rod.

Light key

The light key on the carrying rod is used to switch the light source for the **TM 200** touch microphone on and off.

Note:

The light source of the **UM 200** universal microphone is switched on and off via the receiver. If the UM 200 is connected to the receiver, a button with the **light source** symbol appears on the touch screen.

2.2.4 Microphones

The system can be fitted with various microphones. The application determines which microphone is used.




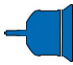



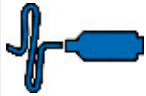
Safety information for using the UM 200

A contact adapter can be attached to the **UM 200** universal microphone. This contact adapter contains a powerful magnet.

It is important to note the following safety information when using the contact adapter:

People with pacemakers must keep their distance.

- Keep the adapter away from magnetic storage media (hard disks, credit cards etc.), monitors (PC, TV) and clocks.

Microphone	Symbol	Connection to	Application	Contact point	Remark
TM 200 touch microphone 		TS 200 carrying rod	Leak detection (prelocation)	Fitting	<ul style="list-style-type: none"> Only ready for use when probe tip is screwed on Extensions available for the probe tip Integrated light source to illuminate the measuring point
BM 200 ground microphone 				Paved	
BM 230 ground microphone 			Leak detection (pinpointing) Pipeline location	Unpaved Paved	<ul style="list-style-type: none"> If ground is very soft, use extra spike Orientation of tripod can be changed (180° rotation)
UM 200 universal microphone 		A 200 receiver	Leak detection	Unpaved Paved Fitting Universal	<ul style="list-style-type: none"> Connected to A 200 with cable Cable is permanently connected to UM 200 Integrated light source to illuminate the measuring point
			Pipe location	Unpaved Paved	

2.3 Switching on and off

2.3.1 Components

Each of the following components features a dedicated on/off button:

- **A 200** receiver
- **TS 200** carrying rod
- **F6** wireless headphones

The components can be switched on and off independently using the on/off key.

Microphones are not switched on or off.

2.3.2 System

Switching on

When the system is turned on, the order in which the individual components are switched on determines the so-called switch-on mode.

If you want the system to start in a specific switch-on mode, you have to switch on the components in a certain order.

When the system is switched on, a radio connection is established between the components of the system. (Applies to all components that are not connected by cables.)

For more detailed information on switch-on mode, please refer to section 2.1.3.1 on page 5.

For more detailed information on switching on the system, please refer to section 3.2 on page 21.

Switching off

When the receiver is switched off, the carrying rod and headphones also switch off automatically.

2.4 Power supply to the components

The following components are powered by a special, inbuilt rechargeable lithium-ion battery.

- **A 200** receiver
- **TS 200** carrying rod

The **F6** wireless headphones come with a rechargeable NiMh battery.

For information on charging the batteries, please see section 5.1 on page 60.

IMPORTANT! Risk of damage when changing lithium-ion batteries

The battery compartments of the components contain parts that could get damaged when the batteries are being replaced.

- Only SEWERIN service personnel or other authorised specialists may replace rechargeable lithium-ion batteries.



WARNING! Risk of explosion due to short circuit

Faulty lithium-ion batteries can explode due to an internal short circuit.

- Do not send components with a faulty lithium-ion battery.
-

3 System in use

3.1 Attaching the microphone to the carrying rod

The carrying rod and microphone are neatly connected to each other.

WARNING! Risk of malfunctions caused by dirt or water seepage

Moisture and dirty contacts can impair the system's functionality. The microphone connection must be clean and dry for attachment.

The seal of the fastening screw must not be dirty or damaged, otherwise water could get in through the thread.

- If dirty, clean the contacts on the carrying rod adapter with a damp cloth. Never use compressed air or a water jet for cleaning. (Microphones can be rinsed under running water.)
 - Dry the entire microphone connector if necessary.
 - Never unscrew the fastening screw all the way out of the thread to minimise the risk of getting dirty.
-

1. Push the microphone into the carrying rod adapter.

2. Turn the carrying rod until it clicks into the stop.

The carrying rod and microphone are neatly connected to each other.

3. Tighten the microphone using the star knob.

The carrying rod is ready for use.

3.2 Switching on the system

If you want the system to start in a specific switch-on mode, you have to switch on the components in a certain order.

If the components are switched on in any order, the receiver selects the appropriate switch-on mode.

Information about the switch-on mode can be found in section 2.1.3.1 on page 5.

Note:

When switching on the **A 200** receiver, the on/off key must be held down until the LED lights up green. This can take a few seconds.

3.2.1 Startup with user guide

Starting with the user guide works from the following starting point:

- All components are switched off.
- A microphone has not yet been selected or connected.

1. Switch the **A 200** receiver on.

A start screen appears briefly on the touch screen. The **Application** menu will then appear.

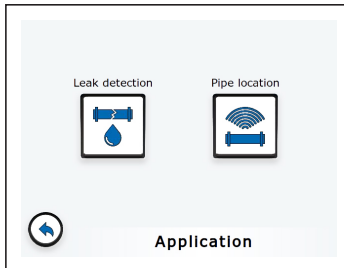


Fig. 11: **Application** menu

2. Select the desired application. The menu for the respective application appears.

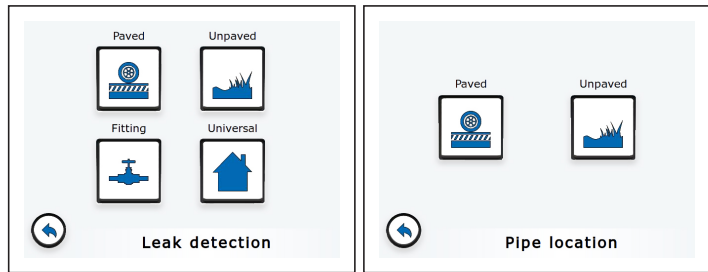


Fig. 12: Left image: **Leak detection** menu
Right image: **Pipe location** menu

3. Select the contact point according to the conditions at the measuring point. The **Searching...** menu appears.

This menu contains instructions. The symbols of the corresponding components are shown in grey beside each step.

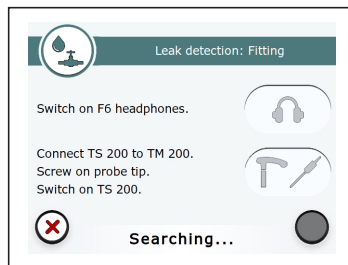


Fig. 13: **Searching...** menu
Application: leak detection, contact point: fitting

4. Follow the instructions in the specified order.

As soon as a step is complete, the corresponding symbols appear in colour.

- **Blue**

The specified component has been connected.

- **Red**

A different component than that specified has been connected.

Once all the specified components have been connected, the receiver automatically switches to the main view.

If components other than those specified have been connected, the switch-on process can be completed manually or cancelled.

- Tap **Confirm** if you want to complete the switch-on process manually.

3.2.2 Direct startup

With Direct startup, the receiver automatically recognises the connected components.

Direct startup works from the following starting point:

- An appropriate microphone has been selected. The microphone is connected:
 - Microphones **BM 200**, **BM 230** or **TM 200** to **TS 200** carrying rod
 - Universal microphone **UM 200** to receiver **A 200**
- All components are switched off.

1. Switch on carrying rod **TS 200**.

Note:

Do not touch the sensor area of the carrying rod when switching it on.

2. Switch on the **F6** headphones.
3. Switch the **A 200** receiver on.

The start screen appears briefly on the touch screen.

The main view appears. The system is ready for use.

3.3 Naming measurements

Data belonging to a measurement includes:

- Noise recorded
- Calculated measurement value
- Information recorded (e.g. volume setting, filter limits, connected microphone)

Each measurement is named with the date and time of the recording.

When saving a measurement you can store optional additional information (e.g. a comment).

In order to compare measurements, they should be taken in the same conditions where possible. The following factors affect comparability:

- Environmental noise
- Selected filter limits
- Recording time

3.4 Starting and ending a measurement

To start and end a measurement you must use either:

- Activation key on **A 200** receiver
- Sensor area on **TS 200** carrying rod

More detailed advice on which controls are best suited to which microphone can be found in section 6.5 on page 76.

The easiest way to tell whether or not a measurement is being taken is by looking at the main view. A measurement value is displayed during a measurement (black figure).

3.5 Adjusting the hearing protection threshold and volume



CAUTION! Health hazard

Excessive noise can damage hearing and lead to irreversible damage to health.

This risk applies to both sudden loud sound interference and the volume being set too high.

- Always adjust the hearing protection threshold and volume to the current situation.
 - Set the hearing protection threshold as low as possible.
 - Set the volume as low as possible.
-

The hearing protection threshold and volume are set in the **Volume** menu.

The main view is open.

1. Tap the **Volume** button. The **Volume** menu appears.

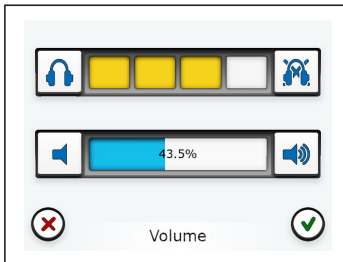


Fig. 14: **Volume** menu

Top: Hearing protection threshold (set: level 3)

Bottom: Volume (set: mid volume)

2. Please set:

- Hearing protection threshold
 - volume limit, which if exceeded, activates hearing-protection
 - adjustable in four levels

Level	Hearing protection threshold	Protective effect	Display colour
1	very high	low	red
2	high	average	orange
3	average	high	yellow
4	low	very high	green

**CAUTION! Health hazard**

If the hearing protection threshold is set very high, the hearing protection will only activate in the case of very loud noises. This means that there is little protection for the hearing.

- Set the hearing protection threshold as low as possible to ensure optimal protection for your hearing.
-

- Volume
 - determines the playback of noise via headphones
 - infinitely adjustable

To set the volume, tap either on the symbols or the area in between the symbols.

3. Click **Confirm** to apply the settings. The receiver will switch back to the main view.

The settings will be retained until they are next changed.

3.6 Adjusting the filter settings

3.6.1 Notes on the filter settings

The receiver analyses the frequencies of the noise. This frequency analysis is displayed in a graph.

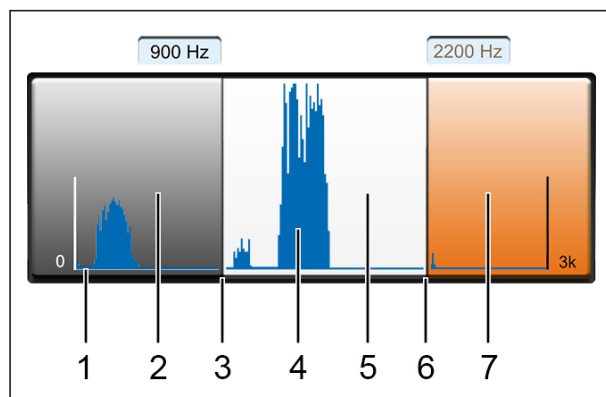


Fig. 15: Frequency analysis

- 1 Frequency axis,
- 2 Lower stopband,
- 3 Lower filter limit (set: 900 Hz),
- 4 Graph of frequency analysis,
- 5 Passband,
- 6 Upper filter limit (set: 2200 Hz),
- 7 Top stopband (activated)

3.6.1.1 Filter limits and stopband

The two filter limits determine the position and width of the stopband within the frequency range. The passband always has a minimum width. The minimum width depends on the frequency range.

Frequency range	Minimum width of passband
0 – 5 kHz	300 Hz
5 – 12 kHz	500 Hz

3.6.1.2 Default settings for every application

Each application has its own default settings for:

- Position of the two filter limits
- Scale for the frequency axis

If the system is started with the user guide, the default settings are automatically preset.

If the system is started directly, the settings that applied the last time the system was switched off will apply.

SEWERIN recommends: Adjust the filter settings to the locating situation after switching on the system.

3.6.1.3 Purpose of adjustment

The filter limits should be set in such a way that any leak noise is accentuated above other noises (e.g. sound interference) and is thus clearly audible.

The filter limits are at the optimal setting when:

- The passband contains the widest and greatest maximum possible of the frequency analysis.
- The position and width of the passband is selected so that single, very narrow and acute maximums lie within one stopband where possible.

3.6.1.4 Adjustment options

You can adjust the filter settings in the following ways:

- Scanning
- Moving filter limits
- Scaling the display
- Resetting filter settings

SEWERIN recommends: Use several adjustment options to achieve the optimal settings for the filters.

3.6.1.5 Display of adjusted filter settings in the main view

The main view shows whether or not filter settings have been adjusted. If the filter settings have been adjusted, the settings button will show the symbol for the connected microphone instead of the symbol for the application.

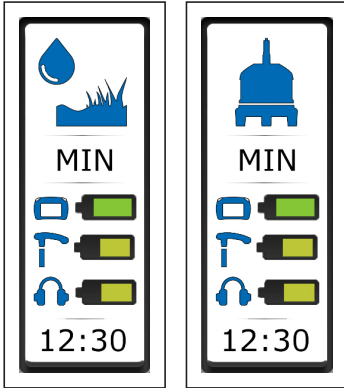


Fig. 16: **Settings** button in the main view

Left image: View for default settings (shows the application)

Right image: View for adjusted filter settings (shows the microphone)

3.6.2 Opening the Filter menu

Note:

Noise can always be heard in the **Filter** menu, even when there is no measurement underway. This allows you to directly check how the filter setting adjustment has affected the noise to be heard.

The main view is open.

- Tap the **Filter** button. The **Filter** menu appears.

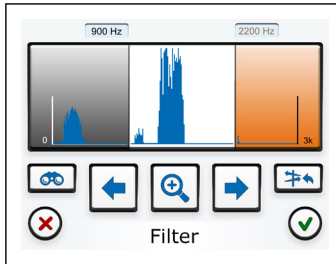


Fig. 17: **Filter** menu

Applying filter settings

Once the filter settings have been adjusted, the settings need to be applied.

The **Filter** menu is open.

- Tap **Confirm**. The filter settings are applied. The receiver will switch back to the main view.

The receiver works with the current filter settings until they are next adjusted.

3.6.3 Scanning

The scan function suggests suitable filter settings for the current locating situation. These can be applied to the measurement or further adjusted manually.

During scanning the receiver checks which parts of the incoming noise have the greatest output. Sound interference is not excluded.

Scanning always takes place over the maximum available frequency range, not just over the frequency range displayed.

The **Filter** menu is open.

1. Tap the **Scan** button. The scanning process starts. The **Scan** menu opens. The frequency analysis appears in green. The progress display shows the progression of the scanning process.

Once the scanning process is complete, the **Confirm** button appears. The frequency analysis appears again in light blue. The receiver suggests suitable filter settings.

2. Confirm the filter settings with **Confirm**. The receiver returns to the **Filter** menu.
3. If necessary optimise the filter settings.

The options are:

- Moving filter limits
- Scaling the display

3.6.4 Moving filter limits

The filter limits can be moved manually.

The upper and lower filter limit cannot be moved at the same time. The corresponding stopband must be activated to move a filter limit. The activated stopband appears in orange.

The filter limits can be moved in two ways.

- In fixed increments

The increment depends on the frequency range.

Frequency range	Increment
0 – 1 kHz	50 Hz
1 – 2.5 kHz	100 Hz
2.5 – 5 kHz	250 Hz
5 – 12 kHz	500 Hz

- By jumping

The jump interval depends on where you tap within the passband / the activated stopband.

Note:

You cannot move the filter limits below the minimum width of the passband.

The **Filter** menu is open.

One of the two stopbands is always activated. The activated stopband appears in orange.

1. To activate the inactive stopband:
 - Tap the grey area of the inactive stopband. The stopband is activated. The area is shown in orange.
2. Move the filter limit of the activated stopband.
 - To move the filter limit in increments:
 - Tap one of the two **Move** buttons. The selected filter limit is moved one increment.
 - To move the filter limit by jumping:
 - Tap in the passband or on the orange area of the activated stopband. The selected filter limit will jump to the relevant spot.
3. Repeat steps 1 and 2 until both filter limits are set as desired.

3.6.5 Scaling the display

Scaling changes the reproduction scale of the frequency axis. Each scaling halves the displayed frequency range. As a result the display doubles in size.

The receiver rolls through the scale. Once the smallest possible level has been reached, the largest level is displayed again. The levels correspond to the frequency ranges in the table below.

Note:

Whether and to what extent scaling is possible depends on the position of the filter limits.

- Scaling is only possible if the upper filter limit is set at or below half of the frequency range.
-

Frequency range (scaling levels)	Display scalable if upper filter limit ...
0 – 12 kHz	≤ 6 kHz
0 – 6 kHz	≤ 3 kHz
0 – 3 kHz	≤ 1.5 KHz
0 – 1.5 kHz	≤ 750 Hz
0 – 750 Hz	≤ 375 Hz

The **Filter** menu is open.

- Tap the **Scale** button. The display is scaled immediately.
- Repeat the scaling process until you achieve the best display of the frequency axis.

3.6.6 Resetting filter settings

The filter settings can be reset to the default settings of the current application at any time.

The **Filter** menu is open.

- Tap the **Reset** button. The filter settings are reset immediately without further prompting.

3.7 Playing back noise repeatedly

Noises can be played back repeatedly using the audio player.

The following noises can be played back:

- Recorded noises

Recorded noises are displayed in the measurement value selection.

- Saved noises

Saved noises have to be loaded from the memory into the measurement value selection.

3.7.1 Opening the Audio Player menu

Note:

Most of the audio player functions only become available when at least one measurement has been recorded. Alternatively, you can also load a measurement from the memory.

The main view is open.

- Tap the **Audio player** button. The **Audio player** menu appears.

The **Audio player** menu is divided into two views. View **Audio player 1/2** contains the functions for saving, playing back and deleting measurements. View **Audio player 2/2** shows information about a measurement.

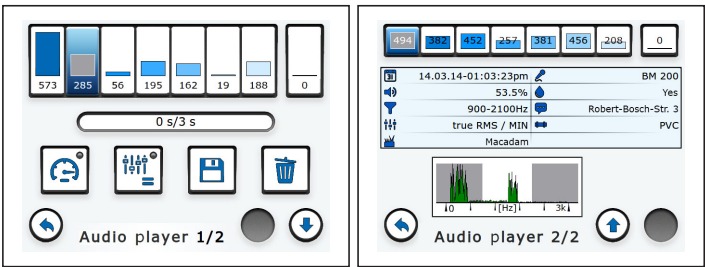


Fig. 18: **Audio player** menu
Left image: View 1/2, right image: View 2/2

Measurement value selection

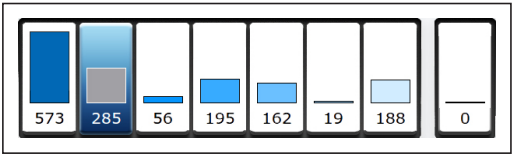


Fig. 19: Measurement value selection in **Audio player 1/2**
Left: 7 connected segments for up to 7 recorded measurements
Right: 1 separate segment for 1 saved measurement

The measurement value selection represents measurements by their measurement value (numeric value and bar).

The measurement value selection is divided into the following two areas:

- 7 connected segments for up to 7 recorded measurements
 - The current measurement is displayed on the left. The oldest measurement is shown on the right.
 - If fewer than 7 measurements have been recorded, the empty segments are grey.
 - The display of the selected measurement is inverted.
- 1 separate segment for loading and playing back a saved measurement
 - The saved measurement is displayed after it has been loaded.

Note:

When the receiver is switched off, the measurement value selection is totally cleared. Measurements that have not been saved are deleted.

3.7.2 Playing back noise

Note:

If the radio connection between the receiver and headphones is interrupted, noise cannot be played back.

- Tap **Back** to switch from the audio player to the main view. Then open the audio player again.
-

You can play back a noise in the following ways:

- With recorded filter limits
- With current filter limits
- Faster than recorded

Note:

You cannot adjust the volume during playback of a recorded noise.

3.7.2.1 Playing back noise with recorded filter limits

The filter limits set during a measurement are automatically recorded too. The noise can be played back after the measurement with these recorded filter limits.

The **Audio player 1/2** menu is open.

- Tap the measurement you want to play back in the measurement value selection. The noise will be played back with the recorded filter settings.

3.7.2.2 Playing back noise with current filter limits

Measurements that have been taken with different filter settings can be compared with each other by playing them back with identical filter settings. The current filter limits can be used as identical filter settings.

The **Audio player 1/2** menu is open.

1. Tap the **Filter settings** button. Playback mode changes. The dot on the **Filter settings** button turns red.
2. Tap the measurement you want to play back in the measurement value selection. The noise is played back with the current filter settings.

Disable playback mode when it is no longer required.

- To do this, tap the **Filter settings** button again. The dot on the **Filter settings** button turns grey again.

3.7.2.3 Playing back noise faster

If a noise contains a lot of low frequencies, it is often hard to hear. Audibility usually improves if this type of noise is played back faster. Playing it back faster creates the effect of a higher frequency.

Note:

Playing back a noise faster disables the recorded filter settings. The noise is played back over the maximum frequency range (0 – 12 kHz).

The **Audio player 1/2** menu is open.

1. Tap the **Speed** button. Playback mode changes. The dot on the **Speed** button turns red.
2. Tap the measurement you want to play back in the measurement value selection. The noise is played back faster than it was recorded.

Disable playback mode when it is no longer required.

- To do this, tap the **Speed** button again. The dot on the **Speed** button turns grey again.

3.8 Saving recorded measurements

Recorded measurements can be saved. Over 70 measurements can be saved.

Measurements lasting up to 60 seconds are saved in full. If the measurement is longer, only the first 60 seconds are saved.

A message appears when the memory is full. Messages in the memory can be deleted to create new space. You can find information on deleting saved measurements in section 3.11 on page 43.

Note:

Measurements that are not saved are automatically deleted when the receiver is switched off.

SEWERIN recommends: Save measurements that contain a lot of information. In this way, you can create a database to compare noises.

The **Audio player 1/2** menu is open.

1. Tap the measurement you want to save in the measurement value selection.
2. Tap the **Save** button. The **Save noise** menu appears.
3. Measurements can be saved with or without additional information.
 - Tap **Confirm** to save the measurement without additional information.

OR

- a) First add the relevant additional information to the measurement.
 - Additional information about the **surface, pipe material** and **suspected leak** is selected from lists.
 - Free text can be entered under **Comment**. The comment can be up to 25 characters long.
 - If several measurements are saved one after the other and the receiver is not switched off in between:

The additional information from the previous measurement can be applied to the following measurement. To do this tap on **Use last data**. The applied data can be edited.

- b) Finally tap on **Confirm** to save the measurement with the additional information.

Adding to or editing additional information

Each measurement is only saved once. As long as a measurement is displayed as a recorded measurement in the measurement value selection, however, you can add to or edit the additional information about this measurement.

- Save the recorded noise again and in doing so add the relevant additional information. Previous additional information is overwritten.

3.9 Deleting the recorded measurement

Recorded measurements can be deleted individually.

The **Audio player 1/2** menu is open.

1. Tap the measurement you want to delete in the measurement value selection.
2. Tap the **Clear** button. The measurement will be deleted immediately without further prompting.

You can find information on deleting saved measurements in section 3.11 on page 43.

3.10 Loading saved measurements

Saved measurements can be loaded from the memory. The noise from loaded measurements can be played back repeatedly. The information about the measurement can also be displayed.

Note:

Only one measurement can be loaded.

The **Audio player 1/2** menu is open.

1. Tap the separate segment on the right in the measurement value selection. The **Open** button appears.

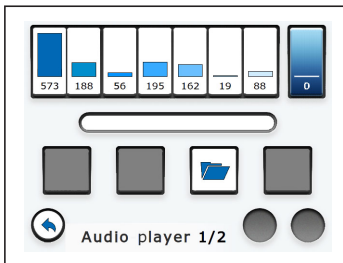


Fig. 20: **Audio player** menu, view 1/2

Top right: The separate segment for loading a measurement is selected. The segment is inverted.

2. Tap the **Open** button. The **Load noise** menu appears.

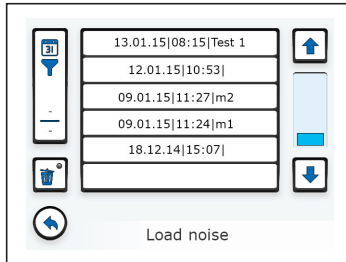


Fig. 21: **Load noise** menu

Top left: **Filter by date** button

Centre: List of saved measurements

3. Tap on the relevant measurement in the list. The measurement immediately appears in the **Audio player 1/2** view.

Filtering saved measurements

Filters can be used to search for specific measurements in the list of saved measurements.

The following filters are available:

- Year
- Year and month

The **Load noise** menu is open.

1. Tap on the **Filter by date** button on the top left. The **Filter by date** menu appears.
2. Set the values for the filters.
 - Left field: year, right field: month
 - The **Any** value means that no filter is set.
 - Only values that have been saved for the data can be selected as filter criteria.

Example:

Measurements were saved in 2013 and 2015. In 2014 no measurement was saved. The filter criteria available for selection are: Any, 2013, 2015.

3. Apply the filters with **Confirm**. The receiver returns to the **Load noise** menu.

The list shows all the measurements that meet the filter criteria. The filters set are displayed on the **Filter by date** button.

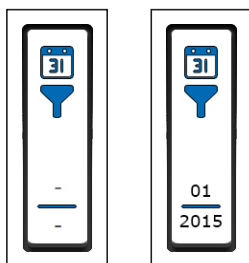


Fig. 22: **Filter by date** button

Left image: no filter set

Right image: filter set (2015 as year, 01 (January) as month)

3.11 Deleting saved measurements

Saved measurements can be deleted individually. To do this delete mode needs to be enabled.

IMPORTANT! Risk of data loss

In delete mode, measurements are deleted immediately without further prompting.

- Work with extreme care in delete mode.
-

The **Audio player 1/2** menu is open.

1. Tap the separate segment on the right in the measurement value selection. The **Open** button appears.
2. Tap the **Open** button. The **Load noise** view appears.
3. Tap the **Clear** button. Delete mode is enabled. The dot on the **Clear** button turns red. The measurements in the list appear in red.
4. Tap the measurement you want to delete in the list. The measurement will be deleted immediately without further prompting.
5. Finally, disable delete mode.
 - To do this, tap the **Clear** button again. Delete mode is disabled. The dot on the **Clear** button turns grey again. The measurements in the list appear in black.

OR

- Tap **Back**.

You can find information on deleting recorded measurements in section 3.9 on page 40.

3.12 Displaying information about a measurement

You can display the information belonging to a measurement. Information cannot be edited.

The **Audio player 1/2** menu is open.

1. Tap on the relevant measurement in the measurement value selection.
2. Tap **Scroll**. The **Audio player 2/2** view appears. The available information about the selected measurement is displayed.

The following information is always displayed:



Date, time



Volume




Filter limits



Measuring method



Connected microphone



Frequency analysis of noise with filter limits

The following additional information is only displayed if the measurement is saved with the relevant data:



Surface



Suspected leak



Comment



Pipe material

3.13 Calibrating the touch screen

The touch screen comes calibrated. If the touch screen does not respond correctly during operation, it can be recalibrated.

Note:

Usually the touch screen does not need to be recalibrated by the user.

Calibration involves two stages, which occur automatically in succession. Firstly the areas are reset. Then the reset areas need to be confirmed.

Note:

Interrupting the calibration process might cause the touch screen to be set in such a way that it cannot be used afterwards.

- Never switch the receiver off during calibration.
 - Always use a touch pen for the calibration procedure.
 - Work with extreme care.
-

The main view is open.

1. Tap the **Settings** button. The **Settings** menu appears.
2. Tap the **Device** button. The **Device** menu appears.
3. Switch to the **Service** view (4/4).
4. Tap **Calibration**. The calibration begins.
5. Follow the instructions.
 - The individual steps must be completed within a limited time. If the time limit is exceeded, the calibration process will be aborted.

- The active area is marked with crosshairs. Non-active areas are grey.
 - **Blue** crosshairs: Set area
 - **Red** crosshairs: Confirm area
- Try to hit the centre of the active area as accurately as possible.

Once the screen has been successfully calibrated, the receiver automatically switches back to the **Service** view.

4 Settings

4.1 Overview

All settings are managed using the **A 200** receiver. The settings can be changed at any time. The following menus are available:

- **Measurement**

The settings affect the system.

- **Application**

The application can be set via the menu.

- **Device**

The settings only affect the receiver.

4.2 Setting actions

The settings in the **Measurement** and **Device** menus are implemented as follows:

- Select
- Enable/disable
- Set value

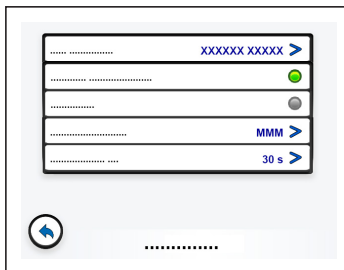


Fig. 23: Menu (sample diagram)

Very top: Menu item with selected settings

Below: Menu items with enabled/disabled settings

Bottom: Menu items with set values

Menu items in which settings can be selected or values set are indicated by the next symbol.

Menu items in which settings can be enabled/disabled are marked with a check box (dot).

4.2.1 Selecting




Fig. 24: Selecting a setting (sample diagram)

Top: Setting selected

Bottom: Setting not selected

Selected settings are marked with the **selected** symbol.

1. In one of the menus, tap on the menu item for which you wish to change the setting.

A sub-menu will appear.

2. Tap the relevant setting.

The setting is applied immediately without further confirmation. The receiver goes back up a menu level.

The selected setting is displayed in the higher menu level.

4.2.2 Enabling/disabling



Fig. 25: Enabling/disabling a setting (sample diagram)

Top: Setting enabled

Bottom: Setting disabled

Enabled settings are indicated by a green check box. Disabled settings have a grey check box.

- In one of the menus, tap on the menu item you wish to enable or disable.

The setting is applied and displayed immediately without further confirmation.

4.2.3 Setting a value

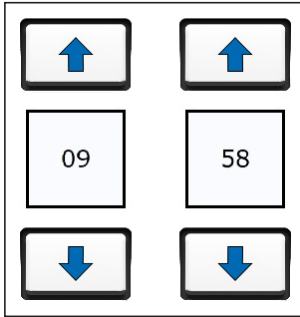


Fig. 26: Setting a value (sample diagram)

Values are set using the arrow keys.

1. Tap an arrow key.
 - The up key increases the value.
 - The down key decreases the value.
2. Click **Confirm** to apply the settings.

The receiver goes back up a menu level.

4.3 Settings in the Measurement menu

Note:

The settings in the **Measurement** menu affect the system.

The main view is open.

1. Tap the **Settings** button. The **Settings** menu appears.
2. Tap the **Measurement** button. The **Measurement** menu appears.

Method >	true RMS f RMS
Type >	MIN MAX
Hearing protection >	Muted Silent
Activation keys >	Touch Switch
Timer >	Forwards Backwards Off
Duration >	10 s 20 s ...

Fig. 27: **Measurement** menu

3. Adjust the settings as required.

The settings options are explained in the next sections.

4. Finally, tap **Back**. The **Settings** menu appears.
5. Tap **Back** again to switch to the main view.

4.3.1 Method

The average noise level is displayed. There are two ways of calculating the average noise level. The difference between the two methods is whether or not the frequencies are taken into account.

The options are:

- **true RMS**

(abbreviation for: true root mean square)

This method does not take the frequencies into account.

- **f RMS**

(abbreviation for: frequency based root mean square)

This method takes the frequencies into account. High frequencies are given greater consideration than low frequencies.

4.3.2 Type

The displayed extreme value can be either the quietest or the loudest noise of a measurement.

The options are:

- **MIN**

The lowest measurement value (minimum) is displayed.

- **MAX**

The highest measurement value (maximum) is displayed.

SEWERIN recommends: Select **MIN** for leak detection.

4.3.3 Hearing protection

There is a hearing protection threshold for acoustic playback of the noise. The hearing protection activates when the set hearing protection threshold is exceeded. Hearing protection can work in two ways.

The options are:

- **muted**

The noise is muted so that it can just about be heard above the hearing protection threshold.

- **silent**

The noise cannot be heard above the hearing protection threshold.

For information about setting the hearing protection threshold, please refer to section 3.5 on page 26.

4.3.4 Activation keys

Note:

This setting determines how the activation keys on both the receiver and the sensor area on the carrying rod are operated.

The activation keys / sensor area can be operated in two different modes.

The options are:

- **touch**

- Activation key

The activation key is held down for the duration of the measurement.

- Sensor area

Keep your thumb on the sensor area for the duration of the measurement.

- **switch**

- Activation key

The activation key is pressed briefly to start the measurement. Pressing the activation key again ends the measurement.

- Sensor area

Briefly press the sensor area with your thumb to start the measurement. Pressing the sensor area again ends the measurement.

4.3.5 Timer

A timer can be displayed on the touch screen. The timer shows how long a measurement has been running for. The timer can work in two different modes.

The options are:

- **Forwards**

Time is counted upwards (0 s, 1 s, 2 s, 3 s, etc.).

- **Backwards**

Time is counted down (3 s, 2 s, 1 s, 0 s, etc.). The timer works in countdown mode.

Once the specified time is up, the measurement does not end automatically.

The duration of the countdown is set under **Duration** in the menu.

- **Off**

The timer is disabled.

4.3.6 Duration

Note:

Duration only appears in the menu when the **Backwards** options has been set under **Timer**.

The duration of the countdown can be set for a countdown timer.

The options are:

- **10 s | 20 s | 30 s | 40 s | 50 s | 60 s**

Duration that can be selected.

4.4 Setting the application

An application can be selected via the **Application** menu. This allows you to change the application when the receiver is switched on.

Typically you might want to change application in the following locating situations:

- When changing from prelocation to pinpointing during leak detection.
- When a locating procedure is already underway and you want to continue with a different microphone (e.g. if the surface at the measuring location changes from paved to unpaved).

The main view is open.

1. Tap the **Settings** button. The **Settings** menu appears.
2. Tap the **Application** button. The **Application** menu appears.
3. Switch off the carrying rod.
4. Select the desired application. The Application menu appears.
5. Select the type of contact point according to the conditions at the measuring point. The **Searching...** menu appears.
6. Follow the instructions in the specified order.

Once all the specified components have been connected, the receiver automatically switches to the main view.

4.5 Settings in the Device menu

Note:

The settings in the **Device** menu only affect the receiver.

The main view is open.

1. Tap the **Settings** button. The **Settings** menu appears.
2. Tap the **Device** button. The **Device** menu appears.

General	
Switch off device >	<div>30 min</div> <div>1 h</div> <div>3 h</div> <div>Off</div>
Switch off backlight >	<div>30 s</div> <div>1 min</div> <div>15 min</div> <div>30 min</div> <div>Off</div>
Detect position 0	
Automatic brightness 0	
Brightness >	...
Time/Date	
Time >	...
Date >	...
Region	
Date format >	<div>DD.MM.YY</div> <div>YYYY-MM-DD</div>
Time format >	<div>12 h</div> <div>24 h</div>
Language >	<div>Deutsch</div> <div>English</div> <div>...</div>
Service	
About	
Calibration	

Fig. 28: **Device** menu

3. Adjust the settings as required.

The **Device** menu is divided into the four views **General**, **Time/Date**, **Region** and **Service**.

- Switch between the views using the **Scroll** buttons.

The settings options are explained in the next sections.

4. Finally, tap **Back**. The **Device** menu appears.
5. Tap **Back** again to switch to the main view.

4.5.1 Switching off the device

The receiver can switch off automatically if it is not operated for a specified period of time.

Note:

This function helps to save energy. It means that the receiver can be used for longer without being recharged.

The options are:

- **30 min | 1 h | 3 h**

Duration that can be selected.

- **Off**

The receiver does not switch itself off.

4.5.2 Switching off the backlight

The touch screen backlight can switch off automatically if it is not operated for a specified period of time. The receiver remains switched on.

Note:

This function helps to save energy. It means that the receiver can be used for longer without being recharged.

The options are:

- **30 s | 1 min | 15 min | 30 min**

Duration that can be selected.

- **Off**

The backlight does not switch itself off.

4.5.3 Detecting the position

The receiver can detect the alignment of the touch screen. This function can be enabled or disabled.

- If the function is enabled, the touch screen automatically switches off when it is in a vertical position.
- As soon as the receiver is in a horizontal position again, the touch screen comes back on.

4.5.4 Automatic brightness

The brightness of the touch screen can automatically adjust to the ambient lighting conditions thanks to the light sensor. This means that the touch screen is clearly legible in every situation.

This function can be enabled or disabled.

- When this function is disabled, you can set the brightness manually.

Information about setting the brightness manually can be found in section 4.5.5 on page 57.

4.5.5 Brightness

Note:

Brightness only appears in the menu when the **Automatic brightness** function is disabled.

When the **Automatic brightness** function is disabled, a permanent value can be set for the brightness of the touch screen.

4.5.6 Time

The receiver features an internal clock. The set time is displayed in the main view on the **Settings** button. The time is also used to identify the measurements.

Note:

The format of the time can be set under **Time format** in the menu.

4.5.7 Date

The date is used to identify the measurements.

Note:

The format of the date can be set under **Date format** in the menu.

4.5.8 Date format

The date can be written in various ways.

The options are:

- **DD.MM.YY**
- **YYYY-MM-DD**

The letters refer to the following:

D: day

M: month

Y: year

4.5.9 Time format

The time can be written in various ways.

The options are:

- **12 h**
12 hour clock
- **24 h**
24 hour clock

4.5.10 Language

The text on the user interface can be displayed in various languages.

There is a range of languages to choose from.

4.5.11 Information

The relevant current technical information is stored in each receiver.

The following information will be displayed:

- Firmware version number
- Hardware version number

4.5.12 Calibration

The touch screen can be calibrated by the user.

For more detailed information on calibration, please refer to section 3.13 on page 45.

5 Maintenance

5.1 Charging the batteries

The batteries of the following components must be charged as required:

- **A 200** receiver (lithium-ion rechargeable battery)
- **TS 200** carrying rod (lithium-ion rechargeable battery)
- **F6** wireless headphones (NiMH rechargeable battery)

The typical charging time is less than 7.5 hours. The batteries are protected against overcharging. The components can, therefore, remain connected to the power supply after they are fully charged.

Always observe the permitted temperature range during charging. If the temperature falls below or exceeds the limit values, charging stops until the temperature returns to within the permitted range.

There are two ways of charging the components:

- All components at the same time in the **AQUAPHON A 200** case
- Each component individually using the AC/DC adapter or vehicle cable

5.1.1 Charging the batteries in the case

The batteries of the components can all be charged simultaneously in the **AQUAPHON A 200** case. The case is connected to the power supply using AC/DC adapter **L**.

The AC/DC adapter is available to buy as an accessory.

The case contains three connection cables for the components. There is a connection socket on the outside of the case for connecting to the power supply.



Fig. 29: Case for the **AQUAPHON** system with three connection cables (white circle) and one connection socket on the outside (black arrow).

1. Place the components in the dedicated spaces in the **AQUAPHON A 200** case.
2. Connect the components using the connection cables.
3. Connect the case to the power supply (230 V) using AC/DC adapter **L**. Charging starts automatically.

After less than 7.5 hours the charging process is complete.

5.1.2 Charging batteries using the AC/DC adapter or vehicle cable

The components are connected directly to the power supply (230 V or vehicle voltage) for charging using **AC/DC adapter M4** or **vehicle cable M4**. Each component is charged individually.

The AC/DC adapter and vehicle cable are available to buy as accessories.

When the battery is fully charged, the LED on the **A 200** receiver and **TS 200** carrying rod emits a double flash (green).

5.2 Handling faulty lithium-ion rechargeable batteries

Lithium-ion rechargeable batteries are always considered dangerous goods for transportation.

The transportation of faulty lithium-ion batteries is only permitted under certain conditions (e.g. must not be transported as air freight). Where transportation is permitted (e.g. by road or rail), it is subject to strict regulations. Faulty lithium-ion batteries must, therefore, always be removed from components before shipping. Transportation by road or rail must occur in compliance with the current applicable version of the ADR regulations ¹.

IMPORTANT! Risk of damage when removing lithium-ion batteries

There are parts in the battery compartments of the components which can get damaged when removing the batteries.

- Lithium-ion batteries must only be removed if there is reasonable suspicion that they might be faulty.
 - Only SEWERIN Service personnel or an authorised specialist may replace rechargeable batteries.
-

5.2.1 Identifying faulty batteries

A lithium-ion battery is considered to be faulty if one of the following criteria applies²:

- Housing damaged or severely deformed
- Fluid leaking out
- Smell of gas
- Measurable increase in temperature when switched off (more than warm to touch)
- Plastic parts melted or deformed
- Connection cables melted

¹ French abbreviation for: Accord européen relatif au transport international des marchandises Dangereuses par Route, *Engl.: European Agreement governing the International Carriage of Dangerous Goods by Road

² As per: EPTA – European Power Tool Association

5.2.2 Removing the batteries from the A 200 receiver

IMPORTANT! Risk of damage when removing lithium-ion batteries

There are parts in the battery compartment of the receiver which can get damaged when removing the batteries.

- Always read section 5.2 and section 5.2.1 before removing the batteries.
 - Only remove the batteries if there is reasonable suspicion that they might be faulty.
-



Fig. 30: Back of the A 200 receiver
White circles: Screws of the battery compartment cover

The batteries are in the battery compartment. The battery compartment is sealed with the battery compartment cover.

The receiver must be switched off.

1. Undo the four screws securing the battery compartment cover.
2. Lift off the battery compartment cover with extreme care.

IMPORTANT! Risk of damage from electrostatic discharge

There is an aerial in the battery compartment cover. That is why the battery compartment cover has an electrical connection (cable) from the inside into the device interior.

- Please ensure that the cable does not get severed.
 - Never touch the solder joint on the inside of the battery compartment cover.
-

3. Disconnect the electrical supply to the faulty battery by pulling off the white plug.

Never sever the cable.

4. Remove the battery.
5. Screw the battery compartment cover back on.

5.2.3 Removing the battery from the TS 200 carrying rod

IMPORTANT! Risk of damage when removing lithium-ion batteries

There are parts in the battery compartment of the carrying rod which can get damaged when removing the battery.

- Always read section 5.2 and section 5.2.1 before removing the battery.
 - Only remove the battery if there is reasonable suspicion that it might be faulty.
-



Fig. 31: Handle of the TS 200 carrying rod (view from underneath)
White circles: Screws of the battery compartment cover

The battery is in the battery compartment. The battery compartment is sealed with the battery compartment cover.

The carrying rod must be switched off.

1. Undo the three screws securing the battery compartment cover on the underside of the handle.
2. Remove the battery compartment cover.
3. Disconnect the electrical supply to the faulty battery by pulling off the white plug.

Never sever the cable.

4. Remove the battery.
5. Screw the battery compartment cover back on.

5.3 Care

All that is necessary to care for the components is to wipe them down with a damp cloth.

SEWERIN recommends: Always remove significant contamination immediately.

Please note the following special points:

- Carrying rod
 - Never use compressed air or a water jet for cleaning.
- Microphones
 - Microphones can be rinsed under running water.

5.4 Maintenance

SEWERIN recommends: Have the system serviced regularly by SEWERIN Service or an authorised professional. Only regular servicing can ensure that the system is always ready for use.

6 Appendix

6.1 Technical data

6.1.1 Receiver A 200

Device data

Dimensions (W x D x H)	225 x 62 x 155 mm
Weight	1.2 kg
Material	Polycarbonate (housing)

Features

Display	5.7" TFT display 640 x 480 pixels (VGA), LED backlight
Interface	Micro USB
Data memory	90 MB (internal)
Processor	32 bit RISC processor Digital signal processor
Control	Touch screen, on/off key, two activation keys

Operating conditions

Operating temperature	-20 °C – +60 °C
Storage temperature	-25 °C – +50 °C (briefly +60 °C)
Humidity	15% – 90% r.h., non-condensing
Protection rating	IP65/IP67
Non-permitted operating environments	In potentially explosive areas

Power supply

Power supply	2 x lithium-ion rechargeable batteries
Operating time, typical	> 10 h
Battery capacity	2 x 6700 mAh, 23 Wh
Battery voltage	2 x 3.6 V
Charging time	< 7.5 h
Charging temperature	0 °C – +40 °C
Charging voltage	12 V
Charging current	1 A
Charger	AC/DC adapter L for charging in the case

Data logging

Filter	Bandpass: adjustable between 0 Hz and 12 kHz Passband, minimum: 300 Hz Steps, minimum: 50 Hz
Sampling rate	16 bit, 24 kHz

Data transmission

Transmission frequency	2.408 – 2.476 GHz, 38 channels
Radio range	> 2 m
Transmission bandwidth	0 – 12 kHz
Communication	SDR (Sewerin Digital Radio)
Power	10 mW

Additional data

Attachment option	Tenax
UN number	Lithium-ion rechargeable battery (separate): UN 3480, certified to UN 38.3 A 200 receiver with lithium-ion rechargeable battery: UN 3481

6.1.2 Carrying rod TS 200

Device data

Dimensions (W x D x H)	50 x 216 x 702 mm
Weight	780 g
Material	Plastic, aluminium

Features

Control	Membrane keypad with 2 keys Capacitive sensor area
---------	---

Operating conditions

Operating temperature	-20 °C – +60 °C
Storage temperature	-25 °C – +50 °C (briefly +60°C)
Humidity	15% – 90% r.h., non-condensing
Protection rating	IP65 (without microphone) IP67 (with microphone)
Non-permitted operating environments	In potentially explosive areas

Power supply

Power supply	Lithium-ion rechargeable battery
Operating time, typical	> 10 h at 23 °C
Battery capacity	2.2 Ah, 8 Wh
Battery voltage	3.6 V
Charging time	< 4 h
Charging temperature	0 °C – +45 °C
Charging voltage	12 V
Charging current	0.6 A
Charger	AC/DC adapter L for charging in the case

Data transmission

Transmission frequency	2.408 – 2.476 GHz, 38 channels
Radio range	> 2 m
Transmission bandwidth	0 – 12 kHz
Communication	SDR (Sewerin Digital Radio)
Power	10 mW

Additional data

UN number	Lithium-ion rechargeable battery (separate): UN 3480, certified to UN 38.3 TS 200 carrying rod with lithium-ion re-chargeable battery: UN 3481
-----------	--

6.1.3 Ground microphone BM 200 and BM 230

Device data

Dimensions (H × Ø)	BM 200: 178 × 163 mm BM 230: 198 × 149 mm
Weight	BM 200: 3 kg BM 230: 2.84 kg
Material	Glass fibre-reinforced polyamide (housing) BM 200: EPDM rubber (base) BM 230: Aluminium (tripod)

Operating conditions

Operating temperature	-20 °C – +60 °C
Storage temperature	-25 °C – +70 °C
Protection rating	IP65 (without TS 200 carrying rod) IP67 (with TS 200 carrying rod)

Non-permitted operating environments	In aggressive media In potentially explosive areas
Normal position of use	Vertical

6.1.4 Touch microphone TM 200

Device data

Dimensions (H × Ø)	155 x 45 mm
Weight	725 g
Material	Stainless steel

Operating conditions

Operating temperature	-20 °C – +60 °C
Storage temperature	-25 °C – +70 °C
Protection rating	IP65 (without TS 200 carrying rod) IP67 (with TS 200 carrying rod)
Non-permitted operating environments	In aggressive media In potentially explosive areas

6.1.5 Universal microphone UM 200

Device data

Dimensions (H × Ø)	123 x 45 mm (without cable)
Weight	1055 g
Material	Stainless steel
Models	2 cable lengths available

Operating conditions

Operating temperature	-20 °C – +80 °C
Storage temperature	-25 °C – +80 °C
Protection rating	IP68
Non-permitted operating environments	In aggressive media In potentially explosive areas














Additional data














Cable length	1.3 m or 2.8 m
--------------	----------------




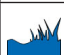







6.2 Symbols on the touch screen of the A 200 receiver














The following tables provide an overview of what the main symbols represent. The symbols can also occur in combination during the program sequence. Many symbols on the touch screen can be displayed in different ways:

- Coloured symbol
Function enabled, system component connected, etc.
- Symbol greyed out
Function disabled, system component not connected, etc.

Symbol	Significance
	Confirm
	Cancel
	Back
	Scroll
	Receiver A 200
	Carrying rod TS 200
	Microphone
	No microphone connected
	Microphone unknown
	Ground microphone BM 200
	Ground microphone BM 230
	Touch microphone TM 200
	Universal microphone UM 200

Symbol	Significance
	Rechargeable battery
	Battery fully charged
	Battery flat
	Headphones
	Hearing protection threshold low
	Hearing protection threshold high
	Volume
	Volume low
	Volume high
	Brightness
	Brightness low
	Brightness high
	Light source on universal microphone

Symbol	Significance
	Pipe location
	Leak detection
	Paved
	Unpaved
	Fitting
	Universal
	Measurement settings
	Application settings
	Device settings
	Timer forwards
	Timer backwards (countdown)

Symbol	Significance
	Scan
	Reset
	Speed
	Filter settings
	Open
	Filter by date
	Save
	Clear
	selected
	Next
	Move
	Scale
	Crosshairs

6.3 Significance of LED signals

6.3.1 A 200 receiver

Col- our	Type of signal	Activation (re- peat)	Significance
Green	Light per- manently on		● A 200 switched on
	Flashing	0.1 s on > 0.9 s off (ongoing)	● Battery charging
	Double flash	0.1 s on > 0.1 s off > 0.1 s on > 0.7 s off (ongoing)	● Battery is fully charged
Red	Light per- manently on		● A 200 switched on ● Undervoltage: Battery needs charged
	Flashing	0.1 s on > 0.9 s off (ongoing)	● Error when charging battery (temperature below or above per- mitted charging tem- perature)

Key:

> subsequently

6.3.2 TS 200 carrying rod








Col- our	Type of signal	Activation (re- peat)	Significance
Green	Light per- manently on		<ul style="list-style-type: none"> • TS 200 switched on • Radio connection to A 200 established
	Slow flash	0.5 s on > 0.5 s off (ongoing)	<ul style="list-style-type: none"> • TS 200 switched on • No radio connection to A 200
	Flashing	0.1 s on > 0.1 s off (1 s long)	<ul style="list-style-type: none"> • TS 200 switches off
	Flashing	0.1 s on > 0.9 s off (ongoing)	<ul style="list-style-type: none"> • Battery charging
	Double flash	0.1 s on > 0.1 s off > 0.1 s on > 0.7 s off (ongoing)	<ul style="list-style-type: none"> • Battery is fully charged
Red	Light per- manently on		<ul style="list-style-type: none"> • TS 200 switched on • Radio connection to A 200 established • Undervoltage: Battery needs charged
	Slow flash	0.5 s on > 0.5 s off (ongoing)	<ul style="list-style-type: none"> • TS 200 switched on • No radio connection to A 200 • Undervoltage: Battery needs charged
	Flashing	0.1 s on > 0.1 s off (ongoing)	<ul style="list-style-type: none"> • Error
	Flashing	0.1 s on > 0.9 s off (ongoing)	<ul style="list-style-type: none"> • Error when charging battery (temperature below or above permitted charging temperature)

Key:

> subsequently





6.4 Suitability of the microphones for the applications

The following table provides an overview of which microphones are suitable for which applications and contact points.

Application	Contact point	Micro-phone
Leak detection	Paved	 BM 200
	Unpaved Paved	 BM 230
	Unpaved Paved Fitting Universal	 UM 200
Pipeline location	Paved	 BM 200
	Unpaved Paved	 BM 230
	Unpaved Paved	 UM 200
Prelocation	Fitting	 TM 200

6.5 Operating the system by activation key or sensor area

The following table provides an overview of which controls are suitable depending on the microphone.

Component	Operated using (on)	Operating mode	
		Touch	Switch
BM 200 	Activation key (A 200)	+	o
	Sensor area (TS 200)	o	o
BM 230 			
TM 200 	Activation key (A 200)	o	o
	Sensor area (TS 200)	+	o
UM 200 	Activation key (A 200)	+	o

Key:

+ Recommended operation

o operation possible

6.6 Accessories

Part	Order number
Ground microphone BM 200	EM24-10000
Ground microphone BM 230	EM25-10000
Touch microphone TM 200	EM20-10200
Probe tip M10 / 350 mm	4000-1213
Probe tip extension 600	4000-1215
Probe tip extension 300	4000-1216
Universal microphone UM 200	EM20-10300
AQUAPHON A 200 SK4 case	ZD43-10000
Vario carrying system	3209-0012
Lap belt carrying system	EA20-Z1000
Hand loop EA 200	3209-0017
AC/DC adapter L	LD26-10000
Vehicle cable L 12 V =	ZL05-10200

Other accessories are available for the system. Please contact our SEWERIN sales department for further information.

6.7 EC Declaration of Conformity

Hermann Sewerin GmbH hereby declares that the **A 200** receiver and the **TS 200** carrying rod fulfil the requirements of the following directive:

- 1999/5/EC

The complete declarations of conformity can be found online.

6.8 Note about the firmware (open source software)

The firmware is based on open source software. The source code is provided in accordance with the licence terms for this open source software (GPL/LGPL). Hermann Sewerin GmbH stresses that it is not responsible for the source code and it does not form part of the services due.

The source code is available on request at cost price by emailing info@sewerin.com.

The full licence terms can be found online (www.sewerin.com) under Unternehmen > Download.

6.9 Advice on disposal

The European Waste Catalogue (EWC) governs the disposal of appliances and accessories.

Description of waste	Allocated EWC waste code
Device	16 02 13
disposable battery, rechargeable battery	16 06 05 / 20 01 34

End-of-life equipment

Used equipment can be returned to Hermann Sewerin GmbH. We will arrange for the equipment to be disposed of appropriately by certified specialist contractors free of charge.

7 Index

A

- Activation keys 9, 52
- Adapter 15
- Additional information about the measurement 39
- Application 6
 - Menu 54
 - Setting 54
- Audio player
 - Button 13
 - Measurement value selection 35
 - Menu 35
- Auto power off 11

B

- Brightness 57
 - Automatic 57

C

- Calibration 45, 59
- Carrying rod 15
 - Adapter 15
 - Light key 16
 - Sensor area 16
- Charging the batteries 60
 - In the case 60
 - Using the AC/DC adapter 61
- Communication 4
- Contact point 6

D

- Date 58
- Date format 58
- Detect position 57
- Direct startup 6, 24
- Display
 - Numerically 10
 - Scaling 33
 - Visually 10
- Duration 54

E

- Enable/disable 48

F

- Fastening screw 15
- Faulty lithium-ion rechargeable battery 62
- Filter
 - Button 13
 - Menu 30
- Filter limits 28
- Moving 32
- Filter settings 28
 - Adjusting 28
 - Adjustment options 29
 - Apply 31
 - Display of adjusted ~ 30
 - Filter limits 28
 - Passband 28
 - Purpose of adjustment 29
 - Reset 34
 - Scale display 33
 - Scanning 31
 - Standard settings 29
- Fitting 7
- Frequency analysis 28
- f RMS 51

H

- Hearing protection 4, 52
- Hearing protection threshold 27
 - Setting 26

I

- Information 59

L

- Language 59
- Leak detection see Application
- LED 9
 - Carrying rod 74
 - Receiver 73
- Light key 16
- Light sensor 8
- Light source 16
- Lithium-ion rechargeable battery
 - Identifying a fault 62
 - Removing 63, 64
 - Transport regulations 62

M

- Main view 11
- Manual zero point setting *see* Zero point, setting
- MAX 51
- Measurement
 - Comparing 25
 - Delete 40, 43
 - Display information 44
 - Edit additional information 39
 - Filter 42
 - Load 40
 - Naming 25
 - Save additional information 39
 - Saving 38
 - Starting/ending 25
- Measurement value selection 35
- Method 51
- Microphone
 - Attaching to the carrying rod 21
 - Overview 18
 - Switching on the light source 16
- MIN 51
- Muted 52

N

- Noise
 - Play back *see* Play back noise
 - Playing back 10

O

- Operating concept 4

P

- Passband 28
- Paved 6
- Pipeline location *see* Application
- Play back noise 36
 - Faster 38
 - Repeatedly 34
 - With current filter limits 37
 - With recorded filter limits 37
- Playing back noises 10
- Power supply 20

R

- Receiver 8
 - Carrying the system 10

- Connectors 9

- Ports 9

- Rechargeable battery *see also* Lithium-ion rechargeable battery
- Charging *see* Charging the batteries

S

- Scanning 31
- SDR 4
- Select 48
- Sensor area 16
- Settings
 - Application 54
 - Button 14
 - Device 55
 - Enable/disable 48
 - Measurement 50
 - Options 47
 - Select 48
 - Set value 49
- Set value 49
- Silent 52
- Star knob 15
- Startup with user guide 5, 22
- Switch off backlight 56
- Switch off device 56
- Switch-on mode 5
- Switch (operating mode) 53
- Symbols (overview) 71
- System
 - Components (overview) 7
 - Switching off 19
 - Switching on 19, 21

T

- Time 58
- Time format 59
- Timer 53
- Touch (operating mode) 52
- Touch screen 8
 - Calibrating 45
- True RMS 51
- Type 51

U

- Universal 7
- Unpaved 6

V

Volume

Button 12

Setting 26



Hermann Sewerin GmbH

Robert-Bosch-Straße 3
33334 Gütersloh, Germany
Tel.: +49 5241 934-0
Fax: +49 5241 934-444
www.sewerin.com
info@sewerin.com

SEWERIN SARL

17, rue Ampère – BP 211
67727 Hoerdt Cedex, France
Tél. : +33 3 88 68 15 15
Fax : +33 3 88 68 11 77
www.sewerin.fr
sewerin@sewerin.fr

SEWERIN IBERIA S.L.

Centro de Negocios "Eisenhower"
Avenida Sur del Aeropuerto
de Barajas 28, Of. 2.1 y 2.2
28042 Madrid, España
Tel.: +34 91 74807-57
Fax: +34 91 74807-58
www.sewerin.es
info@sewerin.es

Sewerin Ltd

Hertfordshire
UK
Phone: +44 1462-634363
www.sewerin.co.uk
info@sewerin.co.uk

Sewerin Sp.z o.o.

ul. Twórcza 79L/1
03-289 Warszawa, Polska
Tel.: +48 22 675 09 69
Tel. kom.: +48 501 879 444
www.sewerin.pl
info@sewerin.pl